

App For iOS and Android



App user manual Pages 1-20



App Bedienungsanleitung Seiten 21-40

Version 4.31





App User Manual

The user manual for the App is not provided in printed form since it is constantly updated to match additional updates of features made to the App. You can always access the latest version of this user manual by downloading it from: www.doorbird.com/support

Additional notes such as the QUICKSTART guides, installation guides for the device and much more can also be downloaded from: www.doorbird.com/support

For reasons of brevity, we use the term "device" to refer to our "DoorBird Video Door Station" and "BirdGuard" products, and use the term "mobile device" to refer to a smartphone or tablet.

Download

Download and open the App "DoorBird" by *Bird Home Automation* from the Apple App Store or Google Play Store.

Screens

We have worked towards making the App's interface as simple and intuitive as possible. Thus, we've done away with many of configurable settings and buttons and have only made the most important functions configurable, as is the case with most common door entry phones. All of our products are pre-configured to use the optimal settings for video, network transport protocols, compression, encryption, ports and much more. There's also no need to enter IP addresses or setup port forwarding etc., which not only makes our products simple to set up but also reliable to use. The screenshots are based on how our App is displayed on an iPhone running Apple's iOS. There may be minor differences as to how this appears on iPad and Android smartphones or tablets.

Nevertheless, the descriptions and functions are identical across those platforms.

Content

Live-Screen	3
History	4
Settings	5
Add Device	6
Edit Device	7
Administration – Login	8
Administration – Settings	9
Administration - Validation type/-schedule	13
Administration – Edit User	14
Administration – SIP Settings	15
Administration – Add Peripherals	16
Administration – IP Door Chime	17
Administration – IP I/O Door Controller	18
D301 – Settings	19
Legal Notes	20



Live-Screen

This screen allows you to speak to your visitors.



1) Connection strength

These bars show the connection strength across the entire network route from the App right up to the device across all access points, routers, cables, etc. At the same time, the strength indicator also indicates data throughput and the latency of transferred data packets.

2) Connection method

Shows how the App is connected to the video door station. The house symbol indicates that the App is connected to your device directly through your LAN. The cloud symbol indicates that the App is connected to your device through our highly secure cloud server via the internet.

3) Live picture

The resolution, compression and number of frames per second depend on the strength of the connection as well as on the connection method.

4) Door opening button

Tap this button to open the door. You'll need to ensure that you've connected a door opener to the device first.

5) Light button

Tap this button to activate the infrared LED ring on the device. Once the infrared LED ring has been activated, the device switches into night-vision mode, and then the image sensor will only detect infrared light. This light switches itself off automatically after a short time.

6) Answering/hanging-up button

Tap this button to start or end voice communications.

7) Connection status

A green dot indicates that the App is able to connect to the device, either via LAN or through the internet. A red dot indicates that the App cannot connect to the device. It can sometimes take a number of seconds before the current status is displayed on screen.

8) Device list

You can add up to 10 compatible devices to the App. Furthermore, if an event was triggered recently, because i.e. someone had rung the device, this will be shown next to the description of the device on the right-hand side.

9) Main menu

These three items will take you to the following screens.

- (iii) Live-Screen
- History (page 4)
- Settings (page 5)



History

This screen allows you navigate through your visitor history. A maximum of 50 visitors each can be stored in the doorbell and motion event navigation. A 51st visitor would then cause the details of the first visitor to be overwritten according to the circular buffer method. An image is stored in the visitor history once a visitor presses the doorbell. Images cannot be deleted manually for reasons of data integrity and security. In the event that you need to comply with any data protection laws, you can fully deactivate the history function within the administrative section in the App.



1) Visitor history images

If you hold your finger over an image in the visitor history for a while, you will be able to save the image to your mobile device and also forward the image by email. For that, you need to give the App access to your photos.

2) Event date and time

This shows the event date with a timestamp. In case that these details are incorrect, please double check the details and accessibility of the NTP server which you can setup in the administrative section.

3) Navigation controls (left, right)

Tab and swipe the small images to switch between events in visitor history.

4) Navigation switch

Tap on this icon to switch between doorbell and motion event. A history of video recordings is also available, if cloud recording pro is enabled.

For more information about **cloud recording**, please visit our website: www.doorbird.com/cloud-recording



Settings

You can manage all the relevant settings from this screen.



1) Device – Add

Tap this button to add a device to the App.

2) Device – Edit

Tap on an entry in order to edit a device that you've already added to the App.

3) Hands-free Mode

Use this option to activate or deactivate the hands-free mode in the App. Hands-free mode is useful if you want to be able to see your visitor whilst you talk to them. Also, we recommend that you activate it, if you are using Bluetooth devices such as speakers or headphones with your mobile device.

4) LAN only mode

In LAN only mode, the video & audio connection of the Live-Screen will only be established, if your device is connected to the local network / WiFi. This mode is particularly good for fixed devices, e.g. indoor door station.

5) Administration

Tap this function to access the administrative section for your device.

6) WiFi Setup

Tap this function to edit the WiFi settings of your device, if you want to connect your device with your local WiFi. In this case, please note the step-by-step instructions for your device and carry it through to the last step.

7) Manual & Videos

Tap this function to open the browser and read the user manuals or view installation videos for your device from our website on your mobile device.

8) Reset to factory defaults

Press here to reset any DoorBird device within your local network and completely delete the image history. You will receive new access data after the reset to the *provided owner email* of the device. Note that your device must be connected by network cable. In addition, this function requires both the device and mobile device to be connected to the internet and on the same network. Please follow the steps described in the App for the chosen device in this section in order to reset it.

9) News Blog

Here you will find the latest news from DoorBird and all information about new product releases.

10) Information

Tap this controller to view general information about the App. There you have the possibility to send us feedback via email, too. Moreover, you can send diagnostic information of your DoorBird device along with your email.



Add Device

You can manage all the relevant settings for adding a device from this screen. More advanced settings are available afterwards by editing the added device.



1) Save

Tap this button to save your settings.

2) User

Enter your device's username as given in the "DIGITAL PASSPORT" document in the QUICKSTART guide on the left side.

3) QR-Code Scanner

If you have a QR-Code available you can set the information (username, password) by tapping on this symbol in order to scan the QR-code of the "DIGITAL PASSPORT". This way, you don't have to type it in. (For that only) the App requires the camera permission of your mobile device.

4) Password

Here you'll need to enter your device's password.

5) Device (Comment)

Here you can enter any textual descriptions for your device, which will appear next to it in the device overview. Simply type a name alias you want, for instance, "lobby" or "garden gate". However, umlauts and special characters cannot be entered for compatibility reasons.

6) Speaker Device

Using this slider you can control how loud your voice will be played back via the device. The default setting is 50%. This default value of 50% fits almost any installation. Changing this value may quickly lead to over-modulating and / or non-understandable speech.

7) Security – Confirm action

Activate this option so that every action on the Live-Screen has to be reconfirmed by an additional tap on the screen to confirm your actions. This function helps prevent accidental key presses which could lead to issues such as inadvertently opening the door etc.



Edit Device

Tap on a device in the Setting-Screen. Then you can manage all the relevant settings of your device and adapt these to your personal taste within the App. These options are more advanced than those presented to you when adding the device. To be able to use these functions, your device must either be online or be on the same network (LAN) as your mobile device.



1) Save

Tap this button to save your settings.

2) User

This is your device's username.

3) Password

This is your device's password.

4) Device (Comment)

Tap here to edit the comment field of your device. This will be visible i.e., when you receive a push notification.

5) Push Notifications - Doorbell

Activate this option to receive push-notifications when someone rings your doorbell and/ or to change the tone of the push-notification. Please ensure that you've enabled the App to use push-notifications (check the global settings in the operating system or the notification center).

6) Push Notifications - Motion

Activate this option to receive push-notifications when the motion detector is triggered and/ or to change the tone of the push-notification. Use the administrative section of the App to check whether the motion detector is activated on the device. Please ensure that push-notifications are enabled for the App (check the global settings in the operating system or the notification center).

7) Geofencing

Enable this option if you want to receive push-notifications when you are inside a certain area. For instance, you can set the location so that you receive notifications only when you are at home. You can set a distance radius between 100m and 500m.

8) Confirm actions

Activate this option to enable function "Confirm actions". Then, each action on the Live-Screen will have to be confirmed before execution (turn on IR-Light, open doors etc.).

9) Locks – Relay (and other)

In this subsection, you can activate supported smart locks to use in combination with the device next to the standard relay. A list of compatible smart locks can be viewed here: http://www.doorbird.com/connect

10) Delete

Tap this button and confirm in order to remove this device from the App.

11) Firmware information and connection

Here you can find the firmware version and connection method (LAN/WiFi) that is currently active on your DoorBird. Please note that all devices are automatically updated to the latest version of the firmware if they are online. You can find current firmware information at www.doorbird.com/changelog.



Administration – Login

You can manage device settings from this administrative section, which can be applied to users of a device as well as to users on this mobile device. To be able to use these functions, your device must either be online or be in the same network (LAN) as your mobile device.



1) Search

Tap this button to search for all devices in your local network (LAN) that are linked to your mobile device. The devices are detected via Bonjour technology. This function is helpful for support purposes but not required for regular use of the App.

2) Admin name

Enter the App Administrator username for your device, which can be found in the "DIGITAL PASSPORT" in the "QUICKSTART Guide" document, which is being found in the box of your device.

3) QR-Code scanner

If you have a QR-Code available (also see the "DIGITAL PASSPORT" document) you can set this information (Admin username, Admin password) by tapping to scan the QR-Code symbol and don't have to type this in.

4) Admin password

Enter the Admin password for your device, which is found in the "DIGITAL PASSPORT". You can generate new passwords for the Admin and users in later sections.

5) Save login

If you enable this feature, the Admin login of a certain device will be listed the next time you visit the page. This way, simply click on the saved login to continue.

6) Continue

Tap this button to enter the administrative section with valid Admin credentials.

7) Delete saved Admin logins

Swipe left to delete formerly saved Admin login credentials.



Administration – Settings



The possible settings vary depending on the device configuration and its model. For example, there are advanced settings e. g. for the display or keypad module. Settings that do not apply to a device are automatically hidden, so this display may differ.

1) Save

Tap this button to save your settings.

2) User

Shows a list of all users registered to the particular device. The "devicename"0000 user is the Administrator of your device. Added Usernames to the App start with "…"0001. You can edit a user account by tapping on it.

In the case of systems with more than one bell or respectively with a keypad, corresponding keys/codes must be assigned to the user. Users without assignment appear in red (you can assign those under "Edit user").

3) Add Users

Tap on this controller to be able to add a user on the device. You can add as many users as you require, i.e. for your family and co-workers. You can also delete a user at any time, i.e. if a co-worker's term of employment ends and they should no longer have access to that device.

4) Owner Email Address

Enter the email address of the device's owner. *This is strongly advised*. With the aid of this email address it is possible to restore the device to its factory settings in the event that you lose your Administrator username and Administrator password details. In order for this email to be sent, your mobile device must have an email account already configured. The App will ask you to confirm the email address.

5) Device name

Enter a device name alias that will then be displayed in the list of saved Admin Logins.

6) Cloud Recording Free

In this section you can enable/disable the image history for Doorbell and Motion event that will be securely stored on our servers – under Storage duration it is possible to set when the data will be deleted automatically. Pressing the information button will redirect you to

http://www.doorbird.com/cloud-recording

7) Cloud Recording Pro

You can enable/disable the optional video history for Doorbell and Motion event – under Storage duration it is possible to set when the data will be deleted automatically. More information at

http://www.doorbird.com/cloud-recording

Tab "Subscription" to see the actual subscription status of your Cloud Recording pro, you can request a trial version, too (can only be done once).

8) 3D Motion Sensor – Activate

Here, you can activate the Motion sensor which will trigger notifications if motion is detected. If the motion sensor is disabled, e. g. when it is required by local privacy regulations, no user of the device can be notified by a push message when movement is detected. (Models: D10x und D20x)

9) 3D Motion Sensor – Settings

Tap here to enter the setting menu for the 3D motion sensor, where you can i.e. schedule at which times the sensor shall be active or in which particular zones motions shall be detected.

(Models: D10x und D20x)





10) 4D Motion Sensor – Activate

Enable this option to enable the 4D motion sensor of your device. On models with display, this function is preset by default, as the area detection runs through this sensor to activate the display when someone approaches. If the motion sensor is disabled, e. g. when it is required by local privacy regulations, no user of the device can be notified by a push message when movement is detected. (Models: D21x)

11) 4D Motion – Settings

Here you have the possibility to set a pause between the alarms (30s to 5min), a distance (~1 to ~10m), the direction of movement, which shall be detected (coming, leaving, both), and a schedule for actions. The schedule allows you, for example, to specify that you want to receive Push-messages only during daytime. For more information on the schedule, see the menu option "Validation types/-schedules" on page 13. (Models: D21x)

In the "**Button Configuration**" area, which only appears on D21x models with multiple bell buttons, you can assign the respective buttons to the corresponding users. You can assign up to 18 buttons.

12) Button Configuration – Settings

Tap here to get a list of all the bell connections. The bells in the system are usually connected from top to bottom. For each button in the list, you can give a name Alias, create schedules for actions and set the "Validation type". For more information on the Validation types, see the menu option "Validation types/-schedules" on page 13. (Models: D21x with multiple buttons)

13) Button Configuration – History

Here you will find an overview of the last 30 bell activities with date and time. (Models: D21x with multiple buttons)

14) Button Configuration – Illumination

Tap here in order to change the illumination of the bell buttons between "Automatic", "Always on" and "off". (Models: D21x with multiple buttons)



KEYPAD		
Settings	>	-(15)
History	>	-(16)
Illumination	Automatic >—	-(17)
Button sound	0-	-(18)
RFID TRANSPONDER		
Settings	>	-(19)
History	>	
FAVORITES		C
HTTP Calls	>	-(21)
SIP Calls	>	-22
PERIPHERALS		
Settings	>	(23)
EXPERT SETTINGS		\bigcirc
EXPERT SETTINGS NTP-Server	pool.ntp.org-	24
EXPERT SETTINGS NTP-Server Relays	pool.ntp.org	24 25
EXPERT SETTINGS NTP-Server Relays Button LED	pool.ntp.org >	24) 25 26
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound	pool.ntp.org > Always on > None >	24) 25 26 27
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light	pool.ntp.org 	24) 25 26 27 28
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor	pool.ntp.org >	-24 -25 -26 -27 -28 -29
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for doorbell	pool.ntp.org >	-24 -25 -26 -27 -28 -29 -30
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for doorbell System diagnostic volume	pool.ntp.org Always on > Always on > Automatic > Standard >	-24 -25 -26 -27 -28 -29 -30 -31
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for doorbell System diagnostic volume SIP Settings	pool.ntp.org 	-24 -25 -26 -27 -28 -29 -30 -31 -31
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for doorbell System diagnostic volume SIP Settings Restart device	pool.ntp.org Always on > Always on > Automatic > Standard > > >	-24 -25 -26 -27 -28 -29 -30 -31 -32 -33
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for doorbell System diagnostic volume SIP Settings Restart device	pool.ntp.org >	-24 -25 -26 -27 -28 -29 -30 -31 -32 -33

The **Keypad** settings can be found on the D21x models with a fixed hardware keypad.

15) Keypad – Settings

Tap here to assign codes to ring or access the gate to the device. You can assign a name and a "Validation type" ("Weekly schedule", "Date range" and "once") with the corresponding actions. For more information, see the menu option "Validation types/-schedules" to each code. It is not possible to assign the same code twice, but several actions can be performed for each code. (Models: D21x with keypad)

16) Keypad – History

Here you will find an overview of the last 30 codes entered with date and time. (Models: D21x with keypad)

17) Keypad – Illumination

Tap here to toggle the illumination of the keypad between "Automatic", "Always on" and "off". (Models: D21x with keypad)

18) Keypad – Button sound

Activate or deactivate the sound tone, when the button is pressed, here. (Models: D21x with keypad) The **RFID Transponder** is available for all devices of the D21x series

19) RFID – Settings

Tap here to assign your RFID transponder to the device. To do this, hold the transponder in front of the small black window underneath the loudspeaker to store the – still unknown - ID in the device. Then you can add it by tapping "Add" and choose it from the list of read IDs.

You can assign a name and a valid time category ("weekly plan", "date range" and "once-only") to the transponder with the corresponding actions. For more information, see the menu option "Validation types/-schedules". Also, you can remove a transponder here.

(Models: D21x)

20) RFID – History

Here you will find an overview of the last 30 access attempts using RFID. (Models: D21x)



KEYPAD			
Settings		>-	
History		>-	
Illumination		Automatic >-	
Button sound		\bigcirc	18
RFID TRANSPONDE	R		
Settings		>-	19
History		>-	20
FAVORITES			
HTTP Calls		>-	21
SIP Calls		>-	22
PERIPHERALS			
Settings		· · · · · · · · · · · · · · · · · · ·	$\widehat{\mathbf{a}}$
oottiingo			23
EXPERT SETTINGS		-	25
EXPERT SETTINGS		pool.ntp.org-	23) 24
EXPERT SETTINGS NTP-Server Relays		 pool.ntp.org- >-	23 24 25
EXPERT SETTINGS NTP-Server Relays Button LED		pool.ntp.org- >- Always on >-	23 24 25 26
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound		pool.ntp.org 	23 24 25 26 27
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light		pool.ntp.org Always on >- None >- Automatic >-	23 24 25 26 27 28
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor		pool.ntp.org Always on >- None >- Automatic >-	23 24 25 26 27 28 29
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for do	orbell	pool.ntp.org- >- Always on >- None >- Automatic >- >-	23 25 26 27 28 29 30
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for do System diagnos	orbell tic volume	pool.ntp.org- Always on >- Always on >- Automatic >- Standard >-	23 26 26 28 29 30 31
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for do System diagnos	orbell tic volume	Pool.ntp.org Always on >- Always on >- None >- Automatic >- Standard >-	23 24 25 26 27 28 29 30 31 32
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for do System diagnos SIP Settings Restart device	orbell tic volume	pool.ntp.org Always on >- Always on >- Automatic >- Standard >- Standard >- >-	23 24 25 26 27 28 29 30 31 32 33
EXPERT SETTINGS NTP-Server Relays Button LED Button Sound IR Light Image Sensor Schedule for do System diagnos SIP Settings Restart device	orbell tic volume	pool.ntp.org- Always on >- Always on >- Automatic >- Standard >- >-	23 24 25 26 27 28 29 30 31 32 33

In the **Favorites** area, you can define settings for SIP and HTTP calls that start a call-in/call-up in combination with actions (Ringing, button press, RFID, or Keypad-Code). The favorites can then be assigned to individual users or actions in the corresponding menu items or actions according to the "Validation type".

21) HTTP Calls

Type here to configure HTTP Calls

22) SIP Calls

Type here to enter a SIP address and the corresponding name for it.

23) Peripheral – Settings

Tap here to add peripheral devices such as our DoorChime or DoorController (see page 16).

24) NTP-Server

Enter the details of an NTP-Server (time server) that the device should use to sync the current time. The default server used is: "pool.ntp.org".

25) Relays

Tap here to get a list of available relays. For each relay, you can set name, mode and the duration that the relay contact triggers when pressed in the Live-Screen (in default mode). Please Note: When the relay is in *toggle* mode, you have to press the "Door Opening" button in the Live-Screen a second time in order to lock the door again.

26) Info module LED (Models with Info Module)

Touch to toggle the illumination of the Info Module between "Automatic", "Always on" and "off". You can also turn the LEDs on/off in the "Live" screen.

27) Button Sound

Tap here to select the button sound of the device itself.

28) IR Light

Tap here to turn off IR Light or to leave it on *automatic* (will turn itself on when a motion or ring event is detected).

29) Image Sensor

Tap here to change contrast and brightness of your DoorBird if necessary.

30) Schedule for doorbell (single bell/code)

Here you can schedule the device for actions which apply to all users. If you don't want a user i.e. to have access to scheduled relays, you can set this in user permissions (more on that on page 14).

31) System diagnostic volume

Tap to change the volume of the system messages. If *silent*, the voice will be quite quiet.

32) SIP Settings

Tap here to enter the SIP Settings menu (see page 14).

33) Restart device

Tab here to restart your DoorBird. The restart can take about 120 seconds.



New: DoorBird Connect

Using the ONVIF protocol, the DoorBird can communicate or be integrated with 3rd party applications. For more information visit <u>http://www.doorbird.com/connect</u>

New: Module Ports (Models: D21x)

Here you have an overview over the modules, which are installed on your DoorBird like i.e. our Info Panel, display or the keypad.



Administration – Validation type/-schedule

In different areas you can choose whether you want to use a button, a code or an RFID transponder once only, in a certain date range or with a weekly schedule. All three settings are explained below.

Once

Validation type	Once >
Is valid	
Actions	>2

If *Actions* are set, they get performed only once after being triggered. Afterwards, they won't be triggered again and have to be manually reactivated (i.e. for One-Time-Codes for the KeyPad).

1) Is valid

Here you can activate the validity of your button, code or transponder or want to do so later.

2) Actions

Select here whether an action is to be executed via a favorite and/or a relay.

Date range

Validation type	Date range 🗦	
Valid from	06.10.17, 11:28	-(1)
Valid to	13.10.17, 11:28	
Actions	>	-2

1) Date range

Specify a time period in which actions for a specific code, transponder or button will be performed.

2) Actions

Select here whether a notification shall be sent or an action is to be executed with the help of previously created favorites and/ or available relays.

Weekly schedule



1) Select a category

Tap here to display and navigate to the schedules for *notifications, relays, HTTP* or *SIP call.* HTTP and SIP *must* first be entered in the favorites and - currently – only one HTTP and one SIP call can be scheduled.

2) Range selection

Activate or deactivate the entire area.

3) Actions

Tap here in order to navigate through the relays or favorites in order to set a schedule.

4) Weekly schedule

Here you can activate (blue) or deactivate (white) the desired area by tapping and/ or dragging the fields. Scroll the table down by swiping vertically on the times on the left side.



Administration – Edit User

BirdHome Network 🗢	13:37	100%	
〈 Back	Administration	Save-	-(1)
USER			~
g 0001			-(2)
PASSWORD			
•••••		•	-3
	Change password -		-(4)
NAME (COMMENT)		
g 0001			-(5
5 0001			\cup
PERMISSIONS			
Permissions		select >	-6
ASSIGN DOORBEL	L		
Doorbell		0000 >	-(7
			\cup
	Send by e-mail —		-(8)
	Delete		_(9
	Bolete		C
4.5		~	
((•))	(~)	रटुः	

1) Save

Tap this button to save your settings.

2) User

This shows the username. As we place great value on creating secure products, user accounts cannot be edited by hand as these are generated by the product automatically.

3) Password

This shows the password.

4) Change password

Tap this button to generate a new password. As we place great value on creating secure products, it is not possible to set a new password by hand as these are generated by the product automatically.

5) Name (comment)

You can enter a name Alias for the user account. You can choose any name you like, for instance "David". However, umlauts and special characters cannot be entered for compatibility reasons.

6) Permissions

In this menu you can assign Permissions and Access to the user. Deactivate "Watch always" to prevent live images to be transmitted unless someone recently rang your doorbell. Also, you can allow the to see a history. You should deactivate those options if required to do so by local data protection laws. Next to that, you can allow access to only certain relays (i.e. "Garden door" but not "House door").

Furthermore, permissions for our peripheral devices can be assigned here, too.

7) Assign Doorbell

In the case of a bell system with multiple bell buttons or access codes, the associated buttons/codes must be assigned to the individual users here.

8) Send by e-mail

Tap this button to send the above listed data to you by email. Moreover, a QR code is generated as email attachment so that the user is easily able to scan the data after modification.

9) Delete

Tap this button to remove the user shown from your device. However, the "....0000" user is the administrator username and therefore cannot be deleted.



Administration – SIP Settings

BirdHome Network 奈	13:37	100%	
🕻 Back	SIP Settings	Save	-1
SIP SETTINGS 🧃			
SIP activated			-2
SIP Proxy			3
SIP User			
SIP Password			
DTMF			-4
Light PIN		Light PIN	-(5)
Relay 1 PIN		Relay 1 PIN	-6
Allow incoming	calls		-7
Allowed SIP Use	ers	5 >	-(8)
Noise cancellati	on		9
Microphone vol	ume		
		- 98%	
Speaker volume	-		-10
		- 97%	
Last error code		502	-(11)
((•))	()	¢3	

1) Save

This saves your settings.

2) SIP activated

Tap this button to activate SIP functionality.

3) SIP Proxy, User and Password

Use these fields to enter information from your SIP server (Proxy-domain/ip, user and password)

4) DTMF

Activate this function to be able to enter PIN codes for your SIP device. Then, you will be able to turn on the LED lights and trigger the relays of the device via SIP communication.

5) Light PIN

Switch on the LED lights on the DoorBird via PIN on the telephone. Always confirm the code on the phone with #.

6) Relays PIN

Switch the relays on the DoorBird via PIN on the telephone. Always confirm the code on the phone with #. Please note that you have to re-enter the PIN, if the relay is in *toggle* mode and you want to switch it back.

7) Allow incoming calls

Activate this function to be able to call the device.

8) Allowed SIP Users

Here you can specify which SIP users are able to call the device. You can enter multiple SIP users.

9) Noise cancellation

Activate/deactivate the out suppression here. Try the quality of the connection during setup, and check which setting is best for you.

10) Microphone and Speaker volume

You can set microphone and speaker volume during the SIP call.

11) Last error code

You can use the error code to resolve problems with the SIP installation. For this purpose, the output is formatted to the standard SIP response codes.



Administration – Add Peripherals



1) Add

Tap here to add new devices. Select between the appropriate devices and follow the instructions. You will need the credentials of the peripheral device.

2) Peripherals list

All added additional devices (e.g., the DoorBird IP Door Chime) associated with the current device are displayed here.



Administration – IP Door Chime

BirdHome Network 🗢 13:37	100%
Kack DoorBird IP Do	oor Chime Save 1
IP DOOR CHIME (GGYKGV) Firmware Version: 000107	2
Name	ggykgv-3
Owner Email Address	hello@doorbird.com
Password	•••••• 🕞 (5
Change pas	sword 6
Blink on ring	
Volume	100%-8
Test on Door	Chime 9
RING SETTINGS	-10
Default	Off >
Storey call	Ding Dong 1 >
Add	
Delete	-(12)
(0) (-)	ŵ

1) Save

This saves your settings.

Device properties This is where the firmware version is listed.

Name
 This is the name of the peripheral device.

3) Owner Email Address Enter your current email address here.

5) Password

This is the password of the peripheral device.

6) Change passwordClick here to generate a new password for the device.

7) Flash LED on ring

Use the slider to activate or deactivate the flashing of the LED on your DoorChime.

8) Volume

Use the slider to adjust the volume of your Door Chime sound.

9) Test on Door Chime

Test the bell volume on the linked Door Chime.

10) Ring Settings

Configure the signal settings of your Door Chime and add additional signals in this submenu.



11) Add

Here you can add further signals. For systems with multiple ring buttons or key codes, certain ringtones can be assigned to individual users, but the "Default" signal must be deactivated.

12) Delete

Delete the connection of your DoorBird / BirdGuard to the IP Door Chime here.



New: Send by e-mail

You can now send the newly generated password credentials together with a QR-Code per email.



Administration – IP I/O Door Controller

3irdHome Network 🗢	13:37	100%	
K Back DoorBird IP I/	O Door (Controller Save	-1
IP I/O DOOR CONTROLLER (0 Firmware Version: 000107	GHASTH)		-2
Name	e.g. Nar	me of the perip—	-3
Owner Email Address	hell	o@doorbird.com—	-4
Password		••••••••	-(5)
Change	passwore	d	6
Blink on trigger		O -	-7
RELAYS 1			-8
Mode		default >—	-9
Default position		open >	-10
Duration -		3s	-11)
RELAYS 2			-(12)
Mode		default >	U
Default position		closed >	
Duration		———— 1 s	
RELAYS 3			-(13)
Mode		default >	Ŭ
Default position		open >	
Duration -		4 s	
D	elete		-(14)
((*))	(-)	\$	

1) Save

This saves your settings.

- Device properties
 This is where peripheral features are listed.
- Name
 This is the name of the peripheral device.
- 4) Owner Email Address Enter your current email address here.
- 5) Password

This is the password of the peripheral device.

6) Change passwordClick here to generate a new password for the device.

7) Flash LED on trigger

Use the slider to activate or deactivate the flashing of the LED on your IP I/O Door Controller.

8) Relays – Settings

Section of the setting options for connected relays. Individual setting options are described in points 10) to 12).

9) Mode

Change the switching modes of your controller here. *default* mode will apply the duration setting. In *toggle* mode, you have to manually trigger the relay a second time in order to switch it back again.

10) Default position

Indicate whether the relay is open or closed when not triggered yet.

11) Duration

Use the slider to set the switching time of the relay in *default* mode.

12) Relays 2 – Settings

The settings for relay 2 are equivalent to relay 1 and points 10) to 12).

13) Relays 3 – Settings

The settings for relay 3 are equivalent to relay 1 and points 10) to 12).

14) Delete

Delete the connection of your DoorBird / BirdGuard to the IP I/O Door Controller here.

Change password Sen

Send by e-mail

New: Send by email

You can now send the newly generated password credentials together with a QR-Code per email.

Final remark:

An added Door Controller will now appear in the "Edit device" menu, in which you can activate push-notifications for it.



D301 – Settings



The D301 can be added as user (page 5) like the DoorBird.

The login to the **administration** area also works as with DoorBird (page 8).

Instead of the video a placeholder appears on the Live View page.



The **user** interface is the same as the DoorBird settings (page 7).

The setting options of the **administration** area are described on pages 9-18.

The menu for setting up the D301 on your external intercom is also available, showing which system is connected to the D301.

EXTERNAL INTERCOM	
Manufacturer	Ritto
Model	17680/xx
Reconfigure	>

During the first installation of the D301 you will be guided through these settings and further you can later change and reconfigure them via the "Reconfigure" item.



Legal Notes

General remarks

1. DoorBird is a registered trademark of Bird Home Automation GmbH.

2. Apple, the Apple logo, Mac, Mac OS, Macintosh, iPad, Multi-Touch, iOS, iPhone and iPod touch are trademarks of Apple Inc.

3. Google, Android and Google Play are trademarks of Google, Inc.

4. The Bluetooth $\ensuremath{\mathbb{R}}$ word mark and logos are registered trademarks of Bluetooth SIG, Inc.

5. All other company and product names may be trademarks of the respective companies with which they are associated.

6. We reserve the right to make changes to our products in the interests of technical advancement. The products shown may also look different from the products supplied based on ongoing enhancement.

7. Reproducing or using texts, illustrations and photos from this instruction manual in any media – even if only in the form of excerpts – shall only be permitted with our express written consent.

8. The design of this manual is subject to copyright protection. We do not accept any liability for any errors or any erroneous content or printing errors (even in the case of technical specifications or within graphics and technical sketches).

9. Our products are in compliance with all technical guidelines, electrical and telecommunications regulations applicable in Germany, the EU and the USA.

Data privacy and data security

1. For maximum security, the device uses the same encryption technologies as are used in online banking. For your security, no port forwarding or DynDNS is used either.

2. The data center location for remote access over the Internet by means of an App is obligatory in the EU if the determined Internet IP-Address location of the device is within the EU. The data center is operated in line with the most stringent security standards.

3. Video, audio and any other surveillance methods can be regulated by laws that vary from country to country. Check the laws in your local region before installing and using this device for surveillance purposes.

If the device is a door-, indoor station or camera:

- In many countries video and voice signal may only be transmitted once a visitor has rung the bell (data privacy, configurable in the App).
- Please carry out the mounting in such a way that the detection range of the camera limits the device exclusively to the immediate entrance area.
- The device may come with a visitor history and motion sensor. You can activate/deactivate this function if required.

If necessary, indicate the presence of the device in a suitable place and in a suitable form.

Please observe any relevant country-specific statutory regulations concerning the use of surveillance components and surveillance cameras applicable at the installation site.

Instructions for disposal

Do not dispose of the device with regular domestic waste. Electronic equipment must be disposed e.g. at local collection points for waste electronic equipment in compliance with the Waste Electrical and Electronic Equipment Directive.

Publisher

Bird Home Automation GmbH Joachimsthaler Str. 12 10719 Berlin Germany

Web: www.doorbird.com Email: hello@doorbird.com



App Für iOS und Android



App user manual Pages 1-20

App Bedienungsanleitung Seiten 21-40

Version 4.31



App Bedienungsanleitung

Da sich die Bedienungsanleitung der App laufend an die Weiterentwicklungen der App anpasst, steht diese nicht in gedruckter Form zur Verfügung. Die stets aktuelle Version der Bedienungsanleitung finden Sie unter www.doorbird.com/de/support

Zusätzliche Hinweise wie z.B. Quickstartanleitung, Installationsanleitung für das Gerät und vieles mehr finden Sie ebenfalls unter www.doorbird.com/de/support

Zur Vereinfachung der Begriffe verwenden wir "Gerät" für die Produkte "DoorBird Video Türstation" und "BirdGuard" sowie "mobiles Endgerät" für ein Smartphone oder Tablet.

Download

Laden und öffnen Sie die App "DoorBird" von *Bird Home Automation* aus dem Apple App Store oder Google Play Store.

Bildschirmoberflächen

Wir haben versucht, die Bedienung so einfach und intuitiv wie nur möglich zu gestalten. Deswegen verzichten wir in der App auch auf hunderte Einstellungsmöglichkeiten und Schalter und haben nur die wichtigsten Funktionen von außen einstellbar gemacht; so wie es z.B. bei herkömmlichen Türsprechanlagen auch der Fall ist. Alle unsere Produkte sind auf optimale Einstellungen vorkonfiguriert, was Video, Transportprotokolle, Kompression, Verschlüsselung, Ports und vieles mehr angeht. Es sind auch keine Eingaben von IP-Adressen oder die Einrichtung von Portweiterleitungen etc. erforderlich. Das macht unsere Produkte nicht nur einfach konfigurierbar, sondern auch sicher und zuverlässig. Die Bildschirmoberflächen orientieren sich an der Darstellung von Apple iOS auf einem iPhone. Auf iPad und Android Smartphones / Tablets kann die Darstellung geringfügig abweichen. Die Bezeichnungen und Funktionen sind aber identisch.

Inhalt

Live-Ansicht	23
Historie	24
Einstellungen	25
Gerät hinzufügen	26
Gerät bearbeiten	27
Administration – Login	28
Administration – Einstellungen	29
Administration – Gültigkeitstypen/-pläne	33
Administration – Benutzer bearbeiten	34
Administration – SIP Einstellungen	35
Administration – Peripherie hinzufügen	36
Administration – IP Türgong	37
Administration – IP E/A Tür Controller	38
D301 – Einstellmöglichkeiten	39
Rechtliche Hinweise	40



Live-Ansicht

Dieser Bildschirm dient der Kommunikation mit Ihrem Besucher.



1) Verbindungsqualität

Diese Balken zeigen die Qualität der Verbindung über die gesamte Netzwerkstrecke von der App bis hin zum Gerät an, d.h. über alle Access Points, Router, Leitungen usw. Die Verbindungsqualität steht gleichzeitig für den Datendurchsatz und die Latenz der übertragenen Daten.

2) Verbindungsweg

Zeigt die Art der Verbindung zwischen der App und Video Türstation an. Das Haus-Symbol steht für eine direkte Verbindung der App zum Gerät über LAN. Das Wolken-Symbol steht für eine Verbindung der App zum Gerät über unseren hochsicheren Cloud-Server über das Internet.

3) Livebild

Die Auflösung, Kompression und Anzahl der Frames pro Sekunde hängen sowohl von der Qualität der Verbindung als auch vom Verbindungstyp ab.

4) Türöffnungsschalter

Betätigen Sie diesen Schalter, um die Tür zu öffnen. Voraussetzung ist, dass Sie einen Türöffner an das Gerät angeschlossen haben.

5) Lichtschalter

Betätigen Sie diesen Schalter, um den Infrarot LED Ring am Gerät einzuschalten. Sobald der Infrarot LED Ring aktiv ist, schaltet das Gerät in den Nachtsichtmodus und es wird nur Infrarotlicht vom Bildsensor erkannt. Das Bild wird dann ohne Farben dargestellt. Das Licht schaltet sich nach kurzer Zeit wieder selbst aus.

6) Abnehmen- / Auflegen-Schalter

Betätigen Sie diesen Schalter, um eine Sprachverbindung zu starten bzw. zu beenden.

7) Status der Verbindung

Ein grüner Punkt sagt aus, dass die App eine Verbindung zum Gerät aufbauen kann. Ein roter Punkt sagt aus, dass die App das Gerät nicht erreichen kann. Es kann manchmal einige Sekunden dauern, bis der aktuelle Status angezeigt wird.

8) Geräteliste

Sie können bis zu 10 kompatible Geräte zur App hinzufügen. Wenn kürzlich ein Ereignis stattgefunden hat, z.B. jemand am Gerät geklingelt hat, wird Ihnen dies auch rechts neben der Beschriftung des Geräts angezeigt.

9) Hauptmenü

Über diese drei Punkte kommen Sie zu den folgenden Bildschirmen

- (iii) Live-Ansicht
- Historie (Seite 23)
- Einstellungen (Seite 24)



Historie

Dieser Bildschirm dient der Navigation in der Besucherhistorie. Es werden jeweils 50 Ereignisse als VGA-Bilder in der Video Türstation archiviert, das 51. Ereignis überschreibt dann das Erste nach dem Ringspeicherprinzip. Ein Bild in der Besucherhistorie entsteht, sobald ein Besucher die Türklingeltaste betätigt. Bilder können aus Konsistenz- und Sicherheitsgründen nicht manuell gelöscht werden. Sollten etwaige Datenschutzanforderungen vorliegen, können Sie zwecks die Historie Einhaltung über den deren Administrationsbereich vollständig abschalten.



1) Bild der Besucherhistorie

Wenn Sie lange auf ein Bild in der Besucherhistorie drücken, können Sie das Bild auf Ihrem mobilen Endgerät speichern und z.B. per Email weiterleiten.

2) Ereignisdatum mit Uhrzeit

Zeigt das Ereignisdatum mit Uhrzeit an. Sollten diese Angaben nicht mit der Realität übereinstimmen, überprüfen Sie bitte die Angaben und Erreichbarkeit des NTP-Servers, den Sie im Administrationsbereich konfigurieren können.

3) Navigationsschalter (links, rechts)

Klicken und wischen ("swipen") Sie die kleinen Bilder, um zwischen den Ereignissen in der Besucherhistorie hin- und herzuwechseln.

4) Button für die Besucherhistorie

Drücken Sie bitte hier um zwischen Klingel, Bewegungsereignissen oder Videoaufzeichnungen umzuschalten. Letzteres benötigt ein aktives Cloud Recording Pro Abonnement und ermöglicht ein unlimitiertes Speichervolumen.

Weitere Informationen zum Cloud-Recording finden Sie auf unserer Website: www.doorbird.com/de/cloud-recording



Einstellungen

Auf diesem Bildschirm können Sie alle relevanten Einstellungen vornehmen.



1) Geräte – Hinzufügen

Betätigen Sie diesen Schalter, um ein Gerät zur App hinzufügen.

2) Geräte – Bearbeiten

Drücken Sie auf den Eintrag, um ein Gerät zu bearbeiten, das Sie bereits zur App hinzugefügt haben.

3) Freisprech Modus – Aktivieren

Nutzen Sie diese Option, um den Freisprech Modus in der App zu aktivieren oder deaktivieren. Der Freisprech Modus ist z.B. dann praktisch, wenn Sie den Besucher sehen möchten, während Sie mit ihm sprechen. Wir empfehlen diese Funktion zu aktivieren, wenn sie Bluetooth-Geräte wie Kopfhörer oder Lautsprecher mit ihrem mobilen Gerät nutzen.

4) LAN Only Modus

Im LAN Only Modus wird die Video- & Audioverbindung für die Live-Ansicht nur mit dem lokalen Netzwerk/mit Wifi hergestellt. Dieser Modus ist besonders gut für festinstalliere Geräte bspw. als "Indoor Station" geeignet.

5) Administration

Betätigen Sie diesen Schalter, um in den Administrationsbereich für Ihr Gerät zu gelangen.

6) W-LAN Setup

In diesem Bereich können Sie eine W-LAN für Ihr Gerät einrichten. Sollten Sie Ihr Gerät mit dem lokalen W-LAN verbinden wollen, so beachten Sie dann exakt die Schrittfür-Schrittanleitung für Ihr Gerät und führen Sie diese bis zum letzten Schritt durch.

7) Handbuch & Videos

Betätigen Sie diesen Schalter, um im Browser das Handbuch und Anleitungs-Videos für Ihr Gerät auf unserer Webseite aufzurufen.

8) Auf Werkseinstellungen zurücksetzen

Drücken Sie hier, um Ihr Gerät zurückzusetzen und die Bildhistorie komplett zu löschen. Sie erhalten nach dem Zurücksetzen neue Zugangsdaten an die zum Gerät *hinzugefügte Eigentümer-Emailadresse*. Beachten Sie, dass Ihr Gerät per Netzwerkkabel angebunden sein muss. Zusätzlich muss sich das mobile Endgerät im gleichen Netzwerk befinden.

9) News Blog

Hier finden Sie aktuelle News aus dem Hause DoorBird und alle Informationen über unsere Produkte.

10) Info

Betätigen Sie diesen Schalter, um allgemeine Infos zur App einzusehen. Außerdem können Sie uns hier ein Feedback via Email zukommen lassen; es besteht die Möglichkeit diagnostische Informationen Ihres DoorBirds Ihrer Email beizufügen.



Gerät hinzufügen

Auf diesem Bildschirm können Sie alle relevanten Einstellungen für das Hinzufügen eines Geräts vornehmen. Weitere Einstellungen stehen Ihnen dann beim Bearbeiten hinzugefügter Geräte zur Verfügung.



1) Speichern

Betätigen Sie diesen Schalter, um die Einstellungen zu speichern.

2) Benutzer

Geben Sie hier den Benutzer Ihres Geräts an.

3) QR-Code Scanner

Falls Sie einen QR-Code vorliegen haben (in der beigelegten QUICKSTART Anleitung das Dokument "DIGITAL PASSPORT"), können Sie die Daten (Benutzer, Passwort) durch Klick auf das QR-Code Symbol einscannen und müssen dann diese nicht eintippen. Hierfür müssen Sie der App Zugriff auf Ihre Kamera gewähren.

4) Passwort

Geben Sie hier das Passwort Ihres Geräts an.

5) Gerät (Freitext)

Geben Sie hier einen Freitext für Ihr Gerät an. Diesen können Sie frei wählen, z.B. "Lobby" oder "Gartentor". Umlaute und Sonderzeichen können aus Kompatibilitätsgründen nicht angegeben werden.

6) Lautsprecher Gerät

Mit diesem Schieberegler können Sie einstellen, wie laut Ihre Sprache aus dem Gerät ausgegeben werden soll. Der Standardwert beträgt "50%". Der Standardwert von 50% passt zu nahezu jeder Installation. Eine Veränderung dieses Werts kann schnell zu Übersteuern und / oder nicht verständlicher Sprache führen.

7) Sicherheit – Aktion bestätigen

Aktivieren Sie diese Option, damit jede Aktion in der Live-Ansicht per Tastendruck noch einmal bestätigt werden muss. Diese Funktion dient der Prävention von Fehleingaben, z.B. das unbeabsichtigte Öffnen der Tür.



Gerät bearbeiten

Auf diesem Bildschirm können Sie alle relevanten Einstellungen des Geräts innerhalb der App vornehmen und auf Ihre individuellen Bedürfnisse anpassen. Die Einstellungsmöglichkeiten sind erweiterte Optionen zu denen, die Ihnen beim Hinzufügen eines Geräts angeboten werden. Das Gerät muss hierfür online oder im selben Netzwerk wie Ihr mobiles Endgerät sein.



1) Speichern

Betätigen Sie diesen Schalter, um die Einstellungen zu speichern.

2) Benutzer

Hier steht der Benutzer Ihres Gerätes.

3) Passwort

Hier steht das Passwort Ihres Gerätes.

4) Gerät (Freitext)

Tippen Sie hier, um das Kommentarfeld Ihres Geräts zu bearbeiten, der angezeigt wird, sobald Sie eine Push-Benachrichtigung durch das Gerät erhalten.

5) Push-Meldungen – Klingel

Aktivieren Sie diese Option, um Push-Meldungen zu erhalten, wenn jemand geklingelt hat. Bitte stellen Sie sicher, dass die App Push-Meldungen generell verwenden darf (globale Einstellungen im Betriebssystem bzw. der Mitteilungszentrale). Hier können Sie den Ton ändern.

6) Push-Meldungen – Bewegung

Aktivieren Sie diese Option, um Push-Meldungen zu erhalten, wenn der Bewegungssensor eine Bewegung erkannt hat. Prüfen Sie über den Administrationsbereich der App, ob der Bewegungssensor im Gerät aktiviert ist. Bitte stellen Sie sicher, dass die App Push-Meldungen generell verwenden darf (globale Einstellungen im Betriebssystem bzw. der Mitteilungszentrale). Hier können Sie auch den Klingel-Ton für das Gerät ändern.

7) Push-Meldungen – Geofencing

Aktivieren Sie diese Option, um ein Areal festzulegen, in dem sie Push-Meldungen von ihrem DoorBird erhalten möchten. Sie können einen Radius zwischen 100m und 500m einstellen.

8) Aktionen bestätigen

Tippen Sie hier um die Funktion "Aktionen bestätigen" zu aktivieren. Vor jede Aktion werden Sie dann gefragt, ob Sie die folgende Aktion durchführen möchten.

9) Relais

Tippen Sie hier, um neben den standardmäßigen Relais auch Smart Locks anderer Anbieter ins Türöffner-Menü hinzuzufügen.

10) Löschen

Betätigen Sie diesen Schalter, um das Gerät aus der App zu löschen.

11) Firmware Information und Verbindung

Sie finden hier die Firmware-Version, die auf Ihrem DoorBird aktiv ist, und den Verbindungstyp (LAN/W-LAN) Ihres Geräts. Bitte beachten Sie, dass alle Geräte automatisch mit der neusten Version der Firmware versorgt werden, wenn diese online sind. Sie finden aktuelle Firmware-Informationen unter www.doorbird.com/changelog

```
© by Bird Home Automation GmbH | www.doorbird.com
```



Administration – Login

Über diesen Bereich können Sie die Einstellungen des Geräts vornehmen, die für alle Benutzer gelten sowie die Benutzer des Geräts bearbeiten. Das Gerät muss hierfür online oder im selben Netzwerk wie Ihr mobiles Endgerät sein.



1) Suchen

Betätigen Sie diesen Schalter, um alle Geräte im lokalen Netzwerk (LAN) zu suchen, mit denen Ihr mobiles Endgerät verbunden ist. Die Geräte werden dabei über die Bonjour Technologie ermittelt. Diese Funktion ist für Supportzwecke hilfreich; ist für normale Anwendungszwecke jedoch nicht relevant.

2) Administrator Benutzername

Geben Sie hier den Administrator Benutzernamen Ihres Geräts an.

3) QR-Code Scanner

Falls Sie einen QR-Code vorliegen haben (siehe in der QUICKSTART Anleitung "DIGITAL PASSPORT"), können Sie die Daten (Administrator Benutzername, Administrator Passwort) per Klick auf das Symbol einscannen und müssen die Daten nicht eintippen.

4) Administrator Passwort

Geben Sie hier das Administrator Passwort Ihres Geräts ein.

5) Login speichern

Wenn Sie diese Funktion aktivieren, wird der Login in "Gespeicherten Admin-Logins" beim nächsten Besuch der Seite aufgeführt und lässt sich betätigen.

6) Weiter

Betätigen Sie diesen Schalter, um zu den Einstellungen im Administrations-Bereich zu gelangen.

7) Löschen

Wischen Sie nach links, um die gespeicherten Zugangsdaten zu löschen.



Administration – Einstellungen



Die Einstellungsmöglichkeiten unterscheiden sich je nach Gerätekonfiguration.

Für das Gerät nicht zutreffende Einstellungen werden automatisch ausgeblendet, daher kann diese Anzeige zu der Ihrigen abweichen.

1) Speichern

Betätigen Sie diesen Schalter, um die gemachten Einstellungen zu speichern.

2) Benutzer

Zeigt die Liste aller im Gerät vorhandenen Benutzer und erlaubt es sie zu bearbeiten. Der Benutzer "Gerätename"0000 ist der Administrator Benutzername des Geräts. Benutzer, denen man das Gerät in der App zur Verwendung zuweisen kann, beginnen ab "…"0001.

Klicken Sie auf einen Benutzer, um diesen zu bearbeiten. Bei Anlagen mit mehreren Klingeln muss dem Nutzer hier die entsprechende Taste/der entsprechende Code zugewiesen werden. Nutzer ohne Zuweisung erscheinen rot.

3) Benutzer – Hinzufügen

Betätigen Sie diesen Schalter, um einen Benutzer im Gerät hinzuzufügen und ihm die jeweilige Taste/ den jeweiligen Code zuzuweisen. Sie können beliebig viele Benutzer hinzufügen wie z.B. für Ihre Familienmitglieder oder Mitarbeiter. Sie können einen Benutzer auch jederzeit wieder löschen, z.B. wenn der Arbeitsvertrag Ihres Mitarbeiters endet und er keinen Zugriff mehr auf das Gerät haben soll.

4) Emailadresse des Eigentümers

Geben Sie hier eine Emailadresse des Eigentümers des Geräts an. *Dies wird strengstens empfohlen*. Über diese Emailadresse kann das Gerät z.B. auf Werkseinstellungen zurückgesetzt werden, sollten Sie die Daten für den Administrator Benutzer und das Administrator Passwort verlieren. Voraussetzung für das Versenden per Email ist ein im mobilen Endgerät bereits eingerichtetes Emailkonto. Die App wird sie beim Speichern bitten, Ihre Emailadresse zu bestätigen.

5) Gerätename

Geben Sie hier den Gerätenamen Alias ein, der dann in der Liste der gespeicherten Administrationszugänge angezeigt wird.

6) Cloud Recording Free

Tippen Sie hier, um die kostenlose Bildhistorie für Bewegung und Türklingel zu aktivieren, welche über unseren Cloud Server läuft – unter Speicherdauer ist es möglich einzustellen, wann die Daten automatisch gelöscht werden.

Das Betätigen des Information-Icons bringt Sie auf unsere

Website http://www.doorbird.com/cloud-recording

7) Cloud Recording Pro

Tippen Sie hier, um die zusätzliche Videohistorie zu aktivieren (Türklingel und Bewegung – HD Video 720p) – unter Speicherdauer ist es möglich einzustellen, wann die Daten automatisch gelöscht werden. Mehr Infos: <u>http://www.doorbird.com/de/cloud-recording</u>

Unter dem Punkt "Abonnement" sehen Sie den aktuellen Stand Ihres Cloud-Recording Pro Abonnements und können einmalig eine Testversion anfordern. (Modelle: D10x und D20x)

8) 3D Bewegungssensor – Aktivieren

Aktivieren Sie diese Option, um den 3D Bewegungssensor Ihres Geräts zu aktivieren. Ist der Bewegungssensor deaktiviert, wenn dies z.B. von den am Installationsort geltenden Datenschutzvorschriften gefordert wird, kann sich kein Benutzer des Geräts per Push-Meldung benachrichtigen lassen, wenn eine Bewegung erkannt wurde. (Modelle: D10x und D20x)

© by Bird Home Automation GmbH | www.doorbird.com





9) 3D Motion - Einstellungen

Tippen Sie hier, um zu den Einstellungen des 3D Bewegungssensors zu gelangen, wo sie räumliche Zonen konfigurieren und einen Zeitplan setzen können. (Modelle: D10x und D20x)

10) 4D Bewegungssensor – Aktivieren

Aktivieren Sie diese Option, um den 4D Bewegungssensor Ihres Geräts zu aktivieren.

Ist der Bewegungssensor deaktiviert, wenn dies z.B. von den am Installationsort geltenden Datenschutzvorschriften gefordert wird, kann sich kein Benutzer des Geräts per Push-Meldung benachrichtigen lassen, wenn eine Bewegung erkannt wurde.

Bei dem Modell mit Display ist diese Funktion fest voreingestellt. Denn über diesen Sensor wird die Bereichserkennung gesteuert mit der das Display aktiviert wird, wenn sich jemand dem DoorBird nähert. (Modelle: D21x)

11) 4D Motion – Einstellungen

Hier haben Sie die Möglichkeit eine Pause zwischen den Alarmen (30s bis 5min), eine Distanz (~1 bis ~10m), die Bewegungsrichtung (Gehend, Kommend, Beide) sowie einen Zeitplan einzustellen.

Über diesen Zeitplan können Sie bestimmen an welchen Tagen und zu welcher Zeit Sie bspw. eine Push-Nachricht bekommen, ein Relais ausgelöst wird oder Sie einen SIP Anruf erhalten. Weitere Informationen finden Sie unter dem Menüpunkt "Gültigkeitstypen/-pläne" auf Seite 32. (Modelle: D21x) In dem Bereich **"Tastenkonfiguration**", der nur bei D21x Modellen mit mehreren Klingeltasten erscheint, können Sie den jeweiligen Tasten den entsprechenden Nutzer zuweisen.

12) Tastenkonfiguration – Einstellungen

Tippen sie hier um eine Liste aller Klingelanschlüsse zu bekommen. Bis zu 18 Anschlüsse können konfiguriert werden. Die Klingeln in der Anlage sind in der Regel von oben nach unten angeschlossen.

Jeder angeschlossenen Taste können Sie einen Namen Alias geben und über den Punkt "Gültigkeitstypen" Zeitpläne für Mitteilungen und Aktionen erstellen. (Modelle: D21x mit mehreren Klingeltasten)

13) Tastenkonfiguration – Historie

Hier finden Sie eine Übersicht, der letzten 30 Klingel-Aktivitäten mit Datum und Uhrzeit. (Modelle: D21x mit mehreren Klingeltasten)

14) Tastenkonfiguration – Beleuchtung

Tippen Sie hier um die Beleuchtung der Klingelbuttons zwischen "Automatisch"; "Immer an" und "Aus" zu wechseln.

(Modelle: D21x mit mehreren Klingeltasten)



KEYPAD		
Einstellungen	>(1	5
Historie	>(1	6
Beleuchtung	Automatik >(1	7
Tastenton	0-(8
Finstellungen	>(1	9)
Listoria		9
HISTOILE	(e	.9
FAVORITEN		_
HTTP Aufrufe	>(2	21)
SIP Nummern	>(2	2
PERIPHERIE		
Finstellungen	>6	3)
Enistendingen		9
EXPERTENEINSTELLUNGEN	e e	9
EXPERTENEINSTELLUNGEN	pool.ntp.org (2	4
EXPERTENEINSTELLUNGEN NTP-Server Relais	pool.ntp.org (2	24) 25)
EXPERTENEINSTELLUNGEN NTP-Server Relais Button LED	pool.ntp.org (2 >(2 Immer an >(2)	
EXPERTENEINSTELLUNGEN NTP-Server Relais Button LED Button Ton	pool.ntp.org (2) (2) Immer an >(2) Keiner >(2)	
EXPERTENEINSTELLUNGEN NTP-Server Relais Button LED Button Ton IR Licht	pool.ntp.org (2) (2) (2) (2) (2) (2) (2) (2)	
EXPERTENEINSTELLUNGEN NTP-Server Relais Button LED Button Ton IR Licht Bildsensor	pool.ntp.org 2 	
EXPERTENEINSTELLUNGEN NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türklingel	pool.ntp.org 2 	
EXPERTENEINSTELLUNGEN NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türklingel Systemdiagnose-Lautstärke	pool.ntp.org 2 	
EXPERTENEINSTELLUNGEN NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türklingel Systemdiagnose-Lautstärke SIP Einstellungen	pool.ntp.org (2) (2) Immer an >(2) Keiner >(2) Automatik >(2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) 	
EXPERTENEINSTELLUNGEN NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türklingel Systemdiagnose-Lautstärke SIP Einstellungen Gerät neu starten	pool.ntp.org (2) (2) Immer an >(2) Keiner >(2) Automatik >(2) (2) Standard >(3) (3) (3) (3) (3) (3)	
EXPERTENEINSTELLUNGEN NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türklingel Systemdiagnose-Lautstärke SIP Einstellungen Gerät neu starten	pool.ntp.org 2 pool.ntp.org 2 Immer an > 2 Keiner > 2 Automatik > 2 Standard > 3 Standard > 3 Standard > 3 (3) (4) (4) (4) (4) (4) (4) (4) (4	

Die Einstellung **Keypad** ist verfügbar bei D21x Modellen mit fest installiertem Hardware Keypad.

15) Keypad – Einstellungen

Tippen Sie hier um dem Gerät Klingel und Zugangscodes zuzuweisen. Sie können jedem Code einen Namen und einen Gültigkeitstypen (Wochenplan, Datumsbereich und einmalig) mit den entsprechenden Aktionen zuweisen.

Weitere Informationen finden Sie unter dem Menüpunkt "Gültigkeitstypen/-pläne".

Eine doppelte Vergabe des gleichen Codes ist nicht möglich, es können aber mehrere Aktionen durchgeführt werden.

(Modelle: D21x mit Keypad)

16) Keypad – Historie

Hier finden Sie eine Übersicht, der letzten 30 eingegeben Codes mit Datum und Uhrzeit. (Modelle: D21x mit Keypad)

17) Keypad – Beleuchtung

Tippen Sie hier um die Beleuchtung des Keypads zwischen "Automatisch", "Immer an" und "Aus" umzuschalten. (Modelle: D21x mit Keypad)

18) Keypad – Tastenton

Aktivieren oder deaktivieren Sie hier den Tastenton des Keypads. (Modelle: D21x mit Keypad) Der **RFID Transponder** steht allen Geräten der D21x Serien zur Verfügung

19) RFID – Einstellungen

Tippen Sie hier, um Ihrem Gerät einen RFID Transponder zuzuweisen. Halten Sie dazu den Transponder dafür zunächst vor das kleine schwarze Fenster unterhalb des Lautsprechers, um die ID im Gerät zu hinterlegen. Erst dann können sie unter "Hinzufügen" den Transponder auswählen und ihm einen Namen und Gültigkeitstypen (Wochenplan, Datumsbereich und einmalig) mit den entsprechenden Aktionen zuweisen. Hinzugefügte Transponder können dann jederzeit bearbeitet werden. Weitere Informationen finden Sie unter dem Menüpunkt "Gültigkeitstypen/-pläne". (Modelle: D21x)

20) RFID – Historie

Hier finden Sie eine Übersicht, der letzten 30 Zugriffsversuche mittels RFID. (Modelle: D21x)



KEYPAD			
Einstellungen		$\rangle -$	—(15)
Historie		>	-(16)
Beleuchtung		Automatik >—	-17)
Tastenton		0-	-18)
RFID TRANSPONDE	R		
Einstellungen		>	(19)
Historie		>	_(20)
FAVORITEN			U
HTTP Aufrufe		>	(21)
SIP Nummern		>	_(22)
			\bigcirc
PERIPHERIE			
Einstellungen		>	-(23)
Einstellungen			23
EXPERTENEINSTELL	LUNGEN		
EXPERTENEINSTELL	LUNGEN	pool.ntp.org-	-24
EXPERTENEINSTELL NTP-Server Relais	LUNGEN	pool.ntp.org	24) 25
EXPERTENEINSTELL NTP-Server Relais Button LED	LUNGEN	pool.ntp.org >	24 25 26
EXPERTENEINSTELL NTP-Server Relais Button LED Button Ton	LUNGEN	pool.ntp.org >= Immer an >= Keiner >=	24 25 26 27
EXPERTENEINSTELL NTP-Server Relais Button LED Button Ton IR Licht	LUNGEN	pool.ntp.org 	2 25 26 27 28
EXPERTENEINSTELL NTP-Server Relais Button LED Button Ton IR Licht Bildsensor	LUNGEN	pool.ntp.org 	29
EXPERTENEINSTELL NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türk	LUNGEN	pool.ntp.org 	2) 29 29 30
EXPERTENEINSTELL NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türk Systemdiagnose	LUNGEN	pool.ntp.org 	2 -2 -2 -2 -2 -2 -2 -2 -2 -2 -
EXPERTENEINSTELL NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türk Systemdiagnose SIP Einstellunge	LUNGEN klingel e-Lautstärke	pool.ntp.org 	-24 -25 -26 -27 -28 -29 -30 -31 -32
EXPERTENEINSTELL NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türk Systemdiagnose SIP Einstellunge Gerät neu starte	LUNGEN klingel e-Lautstärke n	pool.ntp.org 	-24 -25 -26 -27 -28 -29 -30 -31 -32 -33
EXPERTENEINSTELL NTP-Server Relais Button LED Button Ton IR Licht Bildsensor Zeitplan für Türk Systemdiagnose SIP Einstellunge Gerät neu starte	LUNGEN	pool.ntp.org 	24 -25 -26 -27 -28 -29 -30 -31 -32 -33

Im Bereich **Favoriten** können Einstellungen für SIP und HTTP Aufrufe hinterlegt werden, die in Kombinationen mit Aktionen (Klingeln, RFID oder Keypad-Code) einen An-/Aufruf starten. Die Favoriten werden in den entsprechenden Menüpunkten erstellt und dann in den allgemeinen oder nutzerspezifischen Gültigkeitsplänen als Aktionen zugewiesen.

21) HTTP Aufrufe

Tippen Sie hier um eine URL und die dazugehörige Bezeichnung zu hinterlegen.

22) SIP Nummern

Tippen Sie hier um eine SIP Adresse und die dazugehörige Bezeichnung zu hinterlegen.

23) Peripherie Einstellungen

Tippen Sie hier, um Peripheriegeräte wie z.B. unseren DoorChime hinzuzufügen. Mehr dazu Seite 36–38)

24) NTP-Server

Geben Sie hier einen NTP-Server (Zeitserver) an, mit dem sich das Gerät für das Abgleichen der aktuellen Uhrzeit synchronisieren soll. Der Standardserver ist "pool.ntp.org".

25) Relais

Tippen Sie hier, um dem Relais einen Namen Alias zu zuzuweisen und die Dauer festzulegen, die der Relaiskontakt bei Betätigung in der Live-Ansicht triggert. *Hinweis*: Beim Modus "Umschalten" muss das Relays ein zweites Mal manuell betätigt werden, um zurückzuschalten.

26) Info Modul LED

Tippen Sie hier, um die Beleuchtung des Info-Moduls zwischen "Automatisch", "Immer an" und "aus" umzuschalten. Sie können auch in der Live-Ansicht die LEDs an- und ausschalten. (D21x mit Info Panel Modul)

27) Button Ton

Wählen sie hier den Ton aus, der am Gerät selbst erklingt, wenn der Besucher die Klingeltaste betätigt.

28) IR Licht

Tippen Sie hier, um die Einstellungen der IR-LEDs zwischen "Automatik" und "Aus" umzuschalten.

29) Bildsensor

Tippen Sie hier, um Helligkeit und Kontrast Ihrer Türsprechanlage zu ändern.

30) Zeitplan für Türklingel (bei nur einer Klingel/Code)

Hier kann man Zeitplaneinstellungen für das Gerät einstellen, die für alle Benutzer gelten. Wenn man einem Benutzer bspw. keinen Zugang zum Türöffner geben möchte, stellt man das bei den Nutzer Zugriffsrechten ein.

31) Systemdiagnose-Lautstärke

Stellen sie hier die Systemnachrichten Lautstärke runter.

32) SIP Einstellungen

Tippen Sie hier, um die SIP-Einstellungen zu betreten. Näheres dazu unter "SIP Einstellungen"

33) Gerät neu starten

Tippen Sie hier um Ihren DoorBird neu zu starten. Der Neustart dauert zirka 120 Sekunden.

DOORBIRD CONNECT



Neu: DoorBird Connect

Mit dem ONVIF Protokoll kann Ihr DoorBird mit Drittanbieteranwendungen kommunizieren oder integriert werden. Weiteres unter http://www.doorbird.com/connect

Neu: Modul Ports

Hier finden Sie eine Übersicht angeschlossener Module.



Administration – Gültigkeitstypen/-pläne

Sie haben in unterschiedlichen Bereichen die Möglichkeit zu wählen, ob Sie einen Button, einen Code oder einen RFID Transponder einmalig, in einem bestimmten Datumsbereich oder mit einem Wochenplan nutzen möchten. Im Folgenden sind alle drei Einstellmöglichkeiten erläutert.

Einmalig

Gültigkeitstyp	Einmalig >
Gültig	
Aktionen	>2)

1) Gültigkeit

Hier können Sie die Gültigkeit Ihres Buttons, Codes oder Transponders aktivieren oder erst später konfigurieren.

2) Aktionen

Wählen Sie hier, ob eine Aktion mit Favoriten und/ oder Relais ausgeführt werden soll. Nach deren Ausführung wird die Aktion kein weiteres Mal getriggert und müsste wieder erneut aktiviert werden (u.a. sinnvoll für einen Einmalcode mit dem Keypad).

Datumsbereich

Gültigkeitstyp	Datumsbereich >	
Gültig von	05.10.17, 22:04 —	-(1)
Gültig bis	12.10.17, 22:04	
Aktionen	>	-2

1) Datumsbereich

Legen Sie hier den Zeitrahmen fest, in dem Aktionen für einen bestimmten Code, Transponder oder Button ausgeführt werden sollen.

2) Aktionen

Wählen Sie hier, ob eine Aktion mit Hilfe eines vorher angelegten Favoriten und/ oder eines Relais geschaltet werden soll.

Wochenplan



1) Kategorie auswählen

Tippen Sie hier, um den Zeitplan für Relais, einen HTTP Aufruf oder einen SIP Anruf aufzurufen. HTTP und SIP müssen zuvor unter den Favoriten eingetragen sein.

2) Bereichsauswahl

Füllen oder leeren Sie den kompletten Bereich.

3) Aktionen auswählen

Tippen Sie hier, um den Wochenplan für die gewünschten Relais bzw. den gewünschten Favoriten aufzurufen. Bitte beachten sie, dass - zur Zeit – lediglich ein HTTPund ein SIP-Favorit ausführbar sind.

4) Wochenplan

Hier können Sie mittels tippen und/ oder ziehen der Felder den gewünschten Bereich aktivieren (blau) oder deaktivieren (weiß). Auf der linken Seite können sie nach unten scrollen.



Administration – Benutzer bearbeiten

BirdHome Network 🗢	13:37	100%	
🗙 Zurück	Administration	Speichern-	-1
BENUTZER			
g 10001			-2
PASSWORT			
•••••		\odot	-3
	Passwort ändern		-(4)
			\cup
NAME (FREITEXT)			
g 10001			-(5)
BERECHTIGUNGEN	1		
Berechtigunge	n	auswählen >—	-6
TÜRKLINGEL ZUW	EISEN		
Türklingel		0000 >	-7
	Per Email senden		-(8)
			\bigcirc
	Löschen		-9
((*))	()	\$	

1) Speichern

Betätigen Sie diesen Schalter, um die Einstellungen zu speichern.

2) Benutzer

Zeigt den Benutzer an. Da wir großen Wert auf sichere Produkte legen, können Benutzer-Namen nicht frei editiert werden; diese werden vom Produkt automatisch generiert.

3) Passwort

Zeigt das Passwort an.

4) Passwort ändern

Betätigen Sie diesen Schalter, um ein neues Passwort zu vergeben. Da wir großen Wert auf sichere Produkte legen, können Passwörter nicht frei erstellt werden, sondern werden vom Produkt automatisch generiert.

5) Name (Freitext)

Geben Sie hier einen Namen Alias für den Benutzer an. Diesen können Sie frei wählen, z.B. "David". Umlaute und Sonderzeichen können aus Kompatibilitätsgründen nicht angegeben werden.

6) Berechtigungen

Tippen Sie hier, um einem Benutzer Berechtigungen zu erteilen wie über die Historie, den Bewegungssensor oder API-Operatoren. Wenn sie "Immer live sehen" deaktivieren, kann der Benutzer nur die Live-Ansicht sehen, wenn jemand kürzlich den Klingelknopf betätigt hat. Auch kann ihm hier der Zugriff auf die Relais des DoorBirds oder die der verbundenen Peripherie gewährt werden. Beispielsweise könnte man hier einem Nutzer den Zugang zum Gartentor aber nicht der Haustür gewähren.

7) Türklingel zuweisen

Bei Klingelanlagen mit mehreren Klingelbuttons oder Zugriffcodes *müssen* dem einzelnen Nutzer die zugehörigen Buttons/Codes zugewiesen werden. (Modelle:D21x)

8) Per Email senden

Betätigen Sie diesen Schalter, um das geänderte Zugangspasswort per Email zu versenden. Hierbei wird auch ein QR-Code im Anhang generiert, um weiterhin nach Änderungen die Daten einfach scannen zu können.

9) Löschen

Betätigen Sie diesen Schalter, um den anzeigten Benutzer aus dem Gerät zu löschen. Der Benutzer "….0000" ist der Administrator Benutzername und kann nicht gelöscht werden.



Administration – SIP Einstellungen

BirdHome Network 🗢	13:37	100%	
Zurück S	IP Einstellungen	Speichern —	-(1)
			-
SIP EINSTELLUNGE	ч 🚺		
SIP aktiviert			-2
SIP Proxy		_	3
SIP Benutzer			
SIP Passwort			
DTMF		O -	-4
Licht PIN		Licht PIN	-(5)
Relais 1 PIN		Relais 1 PIN	-6
Eingehende Anr	ufe erlauben		-(7)
Erlaubte SIP Ber	nutzer	5 >	-(8)
Rauschunterdrü	ckung		9
Mikrofonlautstär	ker		
Lautsprecherlau	tstärke		-10
		97%	
Letzter Fehlerco	de	502	-(11)
((*))	\bigcirc	ŵ	

1) Speichern

Sichern Sie hiermit Ihre getätigten Einstellungen.

2) SIP aktiviert

Betätigen Sie diesen Schalter, um die SIP Funktionalität zu aktivieren.

3) SIP Anmeldedaten

Tragen Sie hier die Daten (SIP Proxy-Domäne/Ip, Benutzer, Passwort) von Ihrer SIP Konfiguration ein.

4) DTMF

Aktivieren Sie diese Funktion, damit Sie mit einem PIN das Licht anschalten oder die Tür über Relais öffnen können.

5) Licht PIN

Schalten Sie das Licht mittels Pin über das Eingabefeld am Telefon ein. Den Code am Telefon *immer* mit # bestätigen.

6) Relais 1 PIN

Schalten Sie das Relais mittels Pin über das Eingabefeld am Telefon ein. Den Code am Telefon *immer* mit # bestätigen. Hinweis: Sollte sich das Relais im Modus "Umschalten" befinden, muss der PIN erneut eingegeben werden, um es zurückzuschalten.

7) Eingehende Anrufe erlauben

Aktivieren/Deaktivieren Sie hier die Möglichkeit mit dem SIP Telefon auf Ihren DoorBird zu zugreifen.

8) Erlaubte SIP Benutzer

Sie können hier mehrere SIP-Benutzer festlegen.

9) Rauschunterdrückung

Aktivieren/Deaktivieren Sie hier die Rauschunterdrückung. Testen Sie am besten die Verbindungsqualität beim Einrichten und prüfen Sie welche Einstellung für Sie am besten ist.

10) Mikrofon und Lautsprecher-Lautstärke

Sie können hier die SIP Anruf Lautstärke von Mikrofon und Lautsprecher einstellen.

11) Letzter Fehlercode

Sie können anhand des Fehlercodes Probleme bei der SIP Installation abgleichen. Hierzu werden die gängigen SIP Statuscodes ("SIP response codes") ausgegeben.



Administration – Peripherie hinzufügen



1) Hinzufügen

Klicken Sie hier, um neue Geräte hinzuzufügen. Wählen sie im folgenden Schritt zwischen den entsprechenden Geräten und folgen Sie den Anweisungen. Sie benötigen die Zugangscodes aus dem "DIGITAL PASSPORT" Dokument des hinzuzufügenden Geräts.

2) Peripherieliste

Hier werden alle zusätzlichen Geräte (z.B. DoorBird IP-Türgong) angezeigt, welche mit dem aktuellen Gerät verknüpft sind, und können bearbeitet werden.



Administration – IP Türgong

BirdHome Network 🗢	13:37	100%	
〈 Zurück Doo	rBird IP Türgong	Speichern-	-1
IP TÜRGONG (GGYKG Firmware Version: 000	V)		-2
Name	z.B. Name d	es Periphe	-3
Emailadresse des Eigentümers	hello@d	oorbird.com	-4
Passwort	•••	•••••• ⊙	-(5)
P	asswort ändern —		-6
Bei Klingeln blinke	en	O -	-7
Lautstärke			
2		100%	-(8)
Au	f Türgong testen —		9
KLINGELEINSTELLUN	GEN		-10
Standard		Aus >	
Etagenruf	Di	ng Dong 1 >	
	Hinzufügen		-11)
	Löschen		-(12)
(0)	(~)	ŵ	

1) Speichern

Sichern Sie hier Ihre Einstellungen.

2) Geräteeigenschaften

Hier werden Informationen zum Peripherie-Gerät aufgelistet.

3) Name

Name des Peripherie-Geräts.

3) Emailadresse des Eigentümers

Tragen Sie hier Ihre aktuelle Emailadresse ein.

5) Passwort

Passwort Ihres Gerätes.

6) Passwort ändern

Klicken Sie hier, um sich ein neues Passwort für das Gerät generieren zu lassen.

7) LED blinkt beim Klingeln

Mit dem Schieberegler aktivieren bzw. deaktivieren Sie das Blinken der LED an Ihrem Türgong.

8) Lautstärke

Stellen Sie mit dem Schieberegler die Lautstärke Ihres Türgongs ein.

9) Auf Türgong testen

Testen Sie die Lautstärke und Ton auf dem verknüpften Türgong.

10) Klingeleinstellungen

In diesem Menü-Unterpunkt konfigurieren Sie die Einstellungen Ihres Türgongs oder können die Einstellung wieder entfernen.

<	Türklingel 1: IP Türgong Speichern
KLIN	NGELEINSTELLUNGEN
Klin	ngeln
Klin	ngelton DoorBird >
Wie	ederholungen
C	1
	Auf Türgong testen

12) Hinzufügen

Hier können Sie weitere Signale hinzufügen. Bei Anlagen mit mehreren Klingelbuttons oder Keypad-Codes können einzelnen Nutzern bestimmte Klingeltöne zugewiesen werden; dafür muss dann das Signal "Standard" deaktiviert werden.

13) Löschen

Löschen Sie hier die Verbindung Ihres DoorBirds / BirdGuards mit dem IP Türgong.



Neu: Per Email senden

Sie können nun die neuen Zugangsdaten und den neugenerierten QR-Code auch per Email versenden.



Administration – IP E/A Tür Controller



1) Speichern

Sichern Sie hier Ihre Einstellungen.

2) Geräteeigenschaften

Hier werden die Informationen zu dem Peripherie-Gerät aufgelistet.

Name Name des Peripherie-Geräts.

3) Emailadresse des Eigentümers

Tragen Sie hier Ihre aktuelle Emailadresse ein.

5) Passwort

Passwort Ihres Gerätes.

6) Passwort ändern

Klicken Sie hier, um ein neues Passwort für Ihr Gerät zu generieren.

7) Per Email senden

Sie können sich hiermit die neuen Zugangsdaten mit generiertem QR-Code per Email versenden.

8) LED blinkt beim Auslösen

Mit dem Schieberegler aktivieren bzw. deaktivieren Sie das Blinken der LED an Ihrem Tür Controller.

9) Relais 1 - Einstellmöglichkeiten

Abschnitt der Einstellmöglichkeiten für das Relais 1. Einzelne Einstellmöglichkeiten sind in den Punkten 10) bis 12) beschrieben. *Hinweis*: Im *Umschalten* Modus muss das Relais nach einem Trigger zurückgeschaltet werden.

10) Modus

Ändern Sie hier die Schaltungsmodi Ihres Controllers.

11) Standardposition

Geben Sie an, ob das Relais im Ruhezustand offen oder geschlossen ist.

11) Dauer

Nutzen Sie den Schieberegler, um die Schaltdauer des Relais im *Standard* Modus einzustellen.

12) Relais 2 - Einstellmöglichkeiten

Die Einstellungen für das Relais 2 sind äquivalent zum Relais 1 und den Punkten 10) bis 12) vorzunehmen.

13) Relais 3 - Einstellmöglichkeiten

Die Einstellungen für das Relais 3 sind äquivalent zum Relais 1 und den Punkten 10) bis 12) vorzunehmen.

14) Löschen

Löschen Sie hier die Verbindung Ihres DoorBirds / BirdGuards mit dem IP E/A Tür Controller.

Passwort ändern Per Email senden

Neu: Per Email senden

Sie können nun die neuen Zugangsdaten und den neugenerierten QR-Code auch per Email versenden.

Abschließende Bemerkung:

Im "Gerät bearbeiten" Menü erscheint nun ein hinzugefügter Tür Controller; dort kann man nun für diesen Push-Mitteilungen aktivieren.



D301 – Einstellmöglichkeiten



Der **D301** kann wie der DoorBird als Nutzer (Seite 25) hinzu-gefügt werden.

Der Login in den Administrationsbereich funktioniert ebenfalls wie beim DoorBird (Seite 28).

Auf der Seite Live-Ansicht wird statt des Live-Bildes ein Platzhalter angezeigt.



Die Oberfläche **Benutzer** ist gleich die der DoorBird Einstellungen (Seite 27).

Der Einstellmöglichkeiten des **Administrationsbereichs** sind auf den Seiten 29-38 beschrieben.

Ergänzend ist das Menü zur Einrichtung des D301 an Ihrer externen Gegensprechanlage, in dem Sie sehen welche Anlage mit dem D301 verbunden ist.

EXTERNE GEGENSPRECHANLAGE	
Hersteller	
Modell	
Neu konfigurieren	>

Bei der ersten Installation des D301 werden Sie durch diese Einstellungen geführt und Sie können später über den Punkt "Neu konfigurieren" diese auch ändern und neu einrichten.



Rechtliche Hinweise

Allgemeines

1. DoorBird ist ein registriertes Warenzeichen der Bird Home Automation GmbH.

2. Apple, das Apple Logo, Mac, Mac OS, Macintosh, iPad, Multi-Touch, iOS, iPhone und iPod touch sind Warenzeichen von Apple Inc.

3. Google, Android und Google Play sind Warenzeichen von Google, Inc.

4. Die Bluetooth® Wortmarke und Logos sind Warenzeichen von Bluetooth SIG, Inc.

5. Alle anderen Firmen- und Produktnamen können Warenzeichen der jeweiligen Firmen sein, mit denen sie in Verbindung gebracht werden.

6. Änderungen an unseren Produkten, die dem technischen Fortschritt dienen, behalten wir uns vor. Die abgebildeten Produkte können im Zuge der ständigen Weiterentwicklung auch optisch von den ausgelieferten Produkten abweichen.

7. Abdrucke oder Übernahme von Texten, Abbildungen und Fotos in beliebigen Medien aus dieser Anleitung – auch auszugsweise – sind nur mit unserer ausdrücklichen schriftlichen Genehmigung gestattet.

8. Die Gestaltung dieser Anleitung unterliegt dem Urheberschutz. Für eventuelle Irrtümer, sowie inhaltlichebzw. Druckfehler (auch bei technischen Daten oder innerhalb von Grafiken und technischen Skizzen) übernehmen wir keine Haftung.

9. Unsere Produkte entsprechen den in Deutschland, EU und USA geltenden technischen Richtlinien, elektrischen Bestimmungen und Telekommunikationsbestimmungen.

Datenschutz und Datensicherheit

1. Für maximale Sicherheit verwendet das Gerät dieselben Verschlüsselungstechnologien wie beim Onlinebanking. Zu Ihrer Sicherheit sind auch keine Portweiterleitungen oder DynDNS im Einsatz.

2. Der Standort des Rechenzentrums für den Fernzugriff per App über das Internet ist verbindlich in der EU, wenn der festgestellte Internet IP-Adressen Standort des Geräts in der EU ist. Das Rechenzentrum wird nach strengsten Sicherheitsstandards betrieben.

3. Video-, Audio- und jede andere Überwachungsmethode sind durch Gesetze geregelt, die von Land zu Land variieren. Überprüfen Sie die Gesetze in Ihrer Region vor der Installation und Verwendung dieses Gerätes für Überwachungszwecke.

Beachten Sie, wenn es sich bei dem Gerät um eine Tür-, Innenstation oder Kamera handelt:

- In vielen L\u00e4ndern darf Videobild und Sprache erst dann übertragen werden, wenn ein Besucher geklingelt hat (Datenschutz, konfigurierbar in der App)
- Führen Sie die Montage so durch, dass sich der Erfassungsbereich der Kamera ausschlie
 ßlich auf den unmittelbaren Eingangsbereich beschränkt.
- Das Gerät verfügt ggf. über eine integrierte Besucherhistorie und Bewegungssensor. Sie können diese Funktionen, wenn erforderlich, aktivieren oder deaktivieren.

Weisen Sie bei Erfordernis an geeigneter Stelle und in geeigneter Form auf das Vorhandensein des Geräts hin. Beachten Sie alle am Installationsort geltenden relevanten landespezifischen gesetzlichen Regelungen für den Einsatz von Überwachungskomponenten und Überwachungskameras.

Entsorgungshinweis

Gerät nicht im Hausmüll entsorgen! Elektronische Geräte sind entsprechend der Richtlinie über Elektro- und Elektronik-Altgeräte zu entsorgen, z.B. über die örtlichen Sammelstellen für Elektronik-Altgeräte.

Herausgeber

Bird Home Automation GmbH Joachimsthaler Str. 12 10719 Berlin Germany

Web: www.doorbird.com Email: hello@doorbird.com